


 


 

 


 
 

 

 
 
 
 
 
 



 


 








 




 
 


 
 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Aspect	 Format
 Sound	 Shift + Dual
 Picture	 Shift + Format
 EPG	 Guide
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List

Originale	Sostituto
 Recall	 Pre Ch
 Sub	 Subt
 Text	 Text
 Mix	 Shift + Text
 Size	 Eject
 Hold	 Shift + Stop
 Reveal	 Options
 Sub.Page	 Shift + Subt
 Index	 Shift + Info
 Info	 Info
 FAV	 Shift + Pre Ch
 Menu	 Menu
 Input	 AV
 Audio	 Dual
 Up	 Up
 Right	 Right
 Down	 Down





Originale	Sostituto
 Left	 Left
 OK	 Ok
 Back	 Back
 Exit	 Exit
 Vol +	 Vol +
 Vol -	 Vol -
 Sleep	 Sleep
 Prog	 Shift + Sleep
 CH +	 Ch +
 CH -	 Ch -
 Play / Pause	 Play
 Play / Pause	 Pause
 Stop	 Stop
 Source HDMI	 Media
 TV / R	 TV/R
 Source DTV	 Smart
 I<<	 I<<

Originale	Sostituto
 >>	 >>
 <<	 <<
 >>	 >>
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

