
















 





 
































Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer

Originale	Sostituto	Originale	Sostituto
 Power	 DIMMER MUTE	 TV	 DVD
 Source	 SHIFT	 SLOW	 STEP - FREEZE
 Picture	 TV	 HOLD	 REC MODE
 Sound	 DVD	 PRESET-	 PRESET+
 Still	 SAT	 TUNE-	 TUNE+
 Mute	 AUX	 EQ	 SURROUND
 1	 TV	 SOUND	 AUDIO
 2	 DVD	 SUBTITLE	 TIMER
 3	 SAT	 PICTURE	 ZOOM
 4	 AUX	 TOP MENU	 OPT-TOOLS
 5	 TV	 D.MENU	 SETUP
 6	 DVD	 TEXT	 AV INPUT
 7	 SAT	 HOME	 ANGLE
 8	 AUX	 MENU	 INFO
 9	 TV	OK	RETURN
Red	DVD	EXIT	CANCEL
Green	SAT	LIST	SMART
1	AUX	MEDIA	DISPLAY
2	TV	VOL+	CH PAGE +
3	DVD	VOL-	CH PAGE -
4	SAT	TV	DVD
5	AUX	VIDEO	TAPE
6	TV	TUNER	TUNER
7	DVD	AUX - HDD	USB
8	SAT	BLUETOOTH	BLUETOOTH
9	AUX	7	8
Red	TV	HDMI - BAT	PC
Green	DVD	GUIDE EPG	FAV MARKER
1	SAT	NETFLIX	APP
2	AUX	YouTube	Prime Video
3	TV	SEARCH	REPEAT
4	DVD	REPEAT A-B	RANDOM
5	SAT	Mandis SHOP	www.mandis.tv





Originale	Sostituto
 Text	 Text / Goto
 FAV / Sub Code	 Fav / Marker / PC
 TV / Reveal	 TV/Radio /
 Comp / Mix	 Display / Media
 Language	 Audio / Lang I/II
 Cancel	 Shift + Exit / Cancel / Clear
 Info	 Info / Angle
 Recall	 Back / Return
 Zoom	 Zoom / Size
 I / II	 Shift + Audio / Lang I/II

Originale	Sostituto

