



















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer

Originale	Sostituto	Originale	Sostituto
 Power	 DIMMER MUTE	 SHIFT	 TV
 Source	 DVD	 SAT	 AUX
 Picture	 SLOW	 STEP - FREEZE	 HOLD
 Sound	 TUNE-	 TUNE+	 PRESET-
 Still	 PRESET+	 PRESET-	 REC MODE
 Mute	 TITLE	 LANG	 EQ
 1	 AUDIO	 SUBTITLE	 SURROUND
 2	 FORMAT	 SIZE	 TIMER
 3	 PICTURE	 ZOOM	 PROGRAM
 4	 TOP MENU	 OPT-TOOLS	 GOTO
 5	 D.MENU	 SETUP	 TEXT
 6	 HOME	 ANGLE	 INFO
 7	 MENU	 OK	 RETURN
 8	 EXIT	 CANCEL	 BACK
 9	 LIST	 SMART	 CH PAGE +
 Red	 VOL +	 MEDIA	 DISPLAY
 Green	 VOL -	 TV	 DVD
 Blue	 CH -	 CD - STB	 1
 Yellow	 CH +	 VIDEO	 TAPE
 Orange	 VOL -	 5	 TUNER
 Purple	 VOL +	 4	 6
 Pink	 TV	 AUX - HDD	 USB
 Light Blue	 DVD	 8	 BLUETOOTH
 Light Green	 CD - STB	 7	 9
 Light Orange	 1	 HDMI - BAT	 PC
 Light Purple	 2	 GUIDE EPG	 FAV MARKER
 Light Yellow	 3	 NETFLIX	 APP
 Light Blue	 4	 YouTube	 Prime Video
 Light Green	 5	SEARCH	REPEAT
Light Orange	6	REPEAT A-B	RANDOM
Light Purple	7	Mandis SHOP	www.mandis.tv



