





 





 



 

 







 











Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Reset	 Guide / EPG / -/--
 0 / AV PC	 0
 RTN	 Back / Return
 Display	 Display / Media
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Input	 AV / Input / RDS

Originale	Sostituto
 Left / V-	 Left
 Left / V-	 Vol-
 Menu / Enter	 Menu / Home
 Menu / Enter	 OK
 Right / V+	 Right
 Right / V+	 Vol+
 ARC	 Info / Angle
 Down / P-	 Down
 Down / P-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 Text Subcode	 Subtitle / EQ
 PIP Up	 Shift + Up
 PIP Position	 Shift + Left
 PIP On/Off	 Shift + OK
 PIP Size	 Shift + Right
 PIP Down	 Shift + Down





Originale	Sostituto
Text Reveal	Play / Slow
Text Index	Smart / List
Text Hold	Stop / Hold
Text Cancel	Rec / Rec Mode
Text Size	Zoom / Size
Green / MUP	Green / APP / Repeat
Yellow / Pause	Yellow / YouTube / Repeat
Yellow / Pause	Pause / Step / Freeze
Blue / Audio	Blue / Prime Video / Random
Blue / Audio	Audio / Lang I/II
Red / Picture	Red / Netflix / Search
Red / Picture	Setup / OPT /
Sleep	Sleep / Timer
Mute	Mute / Dimmer

Originale	Sostituto

