



















 
 


 












 
 

 
 











 

 

 





 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	PRO/TV/TXT		Text		0		0
	Slow/Cancel		3D		Vol+		Vol +
	Rep/Reveal		TV/R		FAV		Pre Ch
	Source		AV		Vol-		Vol -
	<</Hold		<<		CH+		Ch +
	>>/Size		>>		Recall		Back
	I<</Subpage		I<<		CH-		Ch -
	>>I/Index		>>I		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Menu		Menu
	6		6		Set/CH/List		Smart
	7		7		Exit		Exit
	8		8		Display		Info





Originale		Sostituto		Originale		Sostituto	
	Nicam/A2		Options				
	Mute		Mute				
	Picture		Format				
	Sound		Dual				
	Sleep		Sleep				
	Subtitle		Subt				
	LAN/EPG		Guide				
	Pause		Pause				
	Play		Play				
	Rec		Rec				
	Stop		Stop				
	Open/Close		Eject				
	D-Menu/List		D. Menu				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue/Screen		Blue				

