



Originale		Sostituto		Originale		Sostituto	
	Standby		Power		CH-		CH- / Page-
	Mute		Mute / Dimmer		Vol+		Vol+
	PN		D.Menu / Top		Vol-		Vol-
	Play		Play / Slow		Info		Info / Angle
	Pause		Pause / Step / Freeze		Return/Exit		Back / Return
	Stop		Stop / Hold		Setup		Setup / OPT /
	<<		<< / Tune-		Source		AV / Input / RDS
	>>		>> / Tune+		Goto		Shift + Text /
	I<<		I<< / Preset-		1		1
	>>I		>>I / Preset+		2		2
	Zoom		Zoom / Size		3		3
	Up		Up		4		4
	Down		Down		5		5
	Right		Right		6		6
	Left		Left		7		7
	OK		OK		8		8
	CH+		CH+ / Page+		9		9





Originale		Sostituto	
0	0	HDMI - BAT 0	0
PROGRAM	Program	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program
TITLE/TTX	Title/TTX	GOTO TEXT	Text / Goto
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
SLOW	Slow	SHIFT + SLOW	Shift + Play /
EPG	EPG	GUIDE EPG	Guide / EPG / -/--
TV/RADIO	Tv/Radio	PROGRAM TV/RADIO	TV/Radio /
OPEN/CLOSE	Open/Close	SURROUND	Eject / Surround
FAVORITE	Favorite	PC FAV MARKER	Fav / Marker / PC
REPEAT	Red/Repeat	NETFLIX SEARCH	Red / Netflix / Search
A-B	Green/A-B	APP REPEAT	Green / APP / Repeat
MENU	Yellow/Menu	YouTube REPEAT A-B	Yellow / YouTube / Repeat
ANGLE	Blue/Angle	Prime Video RANDOM	Blue / Prime Video / Random

Originale		Sostituto	

