






























 

 

 















 







Originale	Sostituto
 Standby	 Power
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Open/Close	 Eject / Surround
 Angle	 Info / Angle
 Title	 Sound / Title
 Vol+	 Vol+
 Prog	 TV/Radio /
 Menu	 Menu / Home
 Vol-	 Vol-
 Setup	 Setup / OPT /
 Up	 Up
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Left	 Left
Enter	OK
Right	Right

Originale	Sostituto
 Mute	 Mute / Dimmer
 Down	 Down
 Stop	 Stop / Hold
 1	 1
 2	 2
 3	 3
 Goto	 Text / Goto
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear
 7	 7
 8	 8
 9	 9
 0	 0
<<	<< / Tune-
>>	>> / Tune+





Originale	Sostituto
I<<	I<< / Preset-
>>I	>>I / Preset+
P/N	Red / Netflix / Search
Display	Display / Media
Zoom	Zoom / Size
Slow	Shift + Play /
Step	Shift + Pause / Step /
A-B	Yellow / YouTube / Repeat
Repeat	Green / APP / Repeat
V-Mode	Picture / Format

Originale	Sostituto

