 





 

 

 









 

 
















 

 





	Originale	Sostituto
	Mute	 Mute / Dimmer
	Power	 Power
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	Recall	 Back / Return
	FAV	 Fav / Marker / PC
	Red	 Red / Netflix / Search
	Green	 Green / APP / Repeat
	Yellow	 Yellow / YouTube / Repeat

	Originale	Sostituto
	Blue	 Blue / Prime Video / Random
	Rec	 Rec / Rec Mode
	I<<	 I<< / Preset-
	CH+	 CH+ / Page+
	Up	 Up
	Info	 Info / Angle
	Subtitle	 Subtitle / EQ
	Vol-	 Vol-
	Left	 Left
	OK	 OK
	Right	 Right
	Vol+	 Vol+
	EPG	 Guide / EPG / -/-
	Menu	 Menu / Home
	Down	 Down
	CH-	 CH- / Page-
	>>I	 >>I / Preset+





Originale		Sostituto	
EXIT	Exit	CLEAR EXIT CANCEL	Exit / Cancel / Clear
TEXT	Text	GOTO TEXT	Text / Goto
AUTO	Auto	LIST SMART	Smart / List
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
LAN/AUDIO	LAN/Audio	LANG I/II AUDIO	Audio / Lang I/II
TV/RADIO	Tv/Radio	PROGRAM TV/RADIO	TV/Radio /
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originale	Sostituto

