


 
 





 





 






 

 

 










Originale	Sostituto
 Power	 Power
 Mute	 Mute
 TV	 Media
 Text	 Text
 Info	 Info
 PIP	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide

Originale	Sostituto
 Source	 AV
 Menu	 Menu
 DTV Guide	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Exit	 Exit
 ARC	 3D
 PRE-CH	 Back
 Mix	 Shift + Text
 CANCEL	 Subt





Originale	Sostituto
 Hold	 Options
 Size	 Eject
 Reveal	 Shift + Options
 Update	 Play
 Index	 Shift + Info
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Text Store	 Pause
 Blue	 Blue
 PIP Prog+	 >>
 S.Select	 Sleep
 PIP Prog-	 <<
 DTV Page-	 I<<
 DTV Setup	 D. Menu
 Tv/Radio	 TV/R
 DTV Page+	 >>I

Originale	Sostituto
 PC	 Shift + Media
 Dual I-II	 Dual
 Sleep/Timer	 Shift + Power
 Still	 Shift + Subt
 SSM	 Shift + Dual
 Text List	 List
 PSM	 Format
 DTV Fav	 Pre Ch
 PIP Input	 Shift + Red
 PIP Position	 Shift + Yellow
 PIP Size	 Shift + Green
 Swap	 Shift + Back

