


 





| Originale | Sostituto | Originale | Sostituto |
|--|--|--|---|
|  Tv |  TV/Radio / |  Recall |  Shift + Back / Return |
|  Power |  Power |  Red |  Red / Netflix / Search |
|  World |  Smart / List |  Green |  Green / APP / Repeat |
|  [=]/Text |  Text / Goto |  Yellow |  Yellow / YouTube / Repeat |
|  Sleep |  Sleep / Timer |  Blue |  Blue / Prime Video / Random |
|  Music/Movie/Phot |  Sound / Title |  Vol+ |  Vol+ |
|  1 |  1 |  Mute |  Mute / Dimmer |
|  2 |  2 |  PR+ |  CH+ / Page+ |
|  3 |  3 |  Vol- |  Vol- |
|  4 |  4 |  i |  Info / Angle |
|  5 |  5 |  PR- |  CH- / Page- |
|  6 |  6 |  Menu |  Menu / Home |
|  7 |  7 |  Up |  Up |
|  8 |  8 |  Q.Menu |  D.Menu / Top |
|  9 |  9 |  Left |  Left |
|  Source/Games |  AV / Input / RDS |  OK |  OK |
|  0 |  0 |  Right |  Right |





| Originale | | Sostituto | | Originale | | Sostituto | |
|---|-------|---|-----------------------|-----------|--|-----------|--|
|  | Back |  | Back / Return | | | | |
|  | Down |  | Down | | | | |
|  | Exit |  | Exit / Cancel / Clear | | | | |
|  | [≡].. |  | Setup / OPT / | | | | |
|  | Lang |  | Audio / Lang I/II | | | | |
|  | O/* |  | Zoom / Size | | | | |
|  | Q./.* |  | Picture / Format | | | | |
|  | Play |  | Play / Slow | | | | |
|  | Stop |  | Stop / Hold | | | | |
|  | << |  | << / Tune- | | | | |
|  | >> |  | >> / Tune+ | | | | |
|  | Pause |  | Pause / Step / Freeze | | | | |
|  | Rec |  | Rec / Rec Mode | | | | |
|  | Guide |  | Guide / EPG / -/-- | | | | |
|  | [-O-] |  | Display / Media | | | | |

