





 

 

 



























Originale	Sostituto
 Power	 Power
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Mute	 Mute / Dimmer
 0	 0
 Recall	 Back / Return
 Subtl	 Subtitle / EQ
 V.O.	 Sound / Title
 ←	 Eject / Surround

Originale	Sostituto
 Vol+	 Vol+
 Home	 Shift + Menu /
 P+	 CH+ / Page+
 Vol-	 Vol-
 Movie	 Display / Media
 P-	 CH- / Page-
 Mouse	 Smart / List
 ♪	 D.Menu / Top
 16:9	 Picture / Format
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Info	 Info / Angle
 Down	 Down





Originale	Sostituto
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / [≡i]	<< / Tune-
Play	Play / Slow
Pause / [≡♦]	Pause / Step / Freeze
>> / [≡?]	>> / Tune+
<< / [≡o]	<< / Preset-
Stop / [≡+]	Stop / Hold
>>   / [≡x]	>>   / Preset+
Rec	Rec / Rec Mode
[ / ≡]	Zoom / Size
FAV	Fav / Marker / PC
EPG	Guide / EPG / -/--
Tv/Radio	TV/Radio /

Originale	Sostituto
USB	Shift + 8

