



 



 

 

 

 

 

 

 



 

 

 



 



Originale	Sostituto
 Power	 Power
 Eject	 Eject / Surround
 Subtitle	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 Angle	 Info / Angle
 4	 4
 5	 5
 6	 6
 Audio	 Audio / Lang I/II
 7	 7
 8	 8
 9	 9
 Osd	 Display / Media
 Time	 Sleep / Timer
 10+	 Guide / EPG / -/--

Originale	Sostituto
 0	 0
 PS/IS	 Smart / List
 Title	 Sound / Title
 Prog	 TV/Radio /
 Clear	 Exit / Cancel / Clear
 Setup	 Setup / OPT /
 Up	 Up
 Left	 Left
 Ok	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Menu	 Menu / Home
 Pbc	 Picture / Format
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow





	Originale	Sostituto
	>>	 >> / Preset+
	>>	 >> / Tune+
	Stop	 Stop / Hold
	I<<	 I<< / Preset-
	Zoom	 Zoom / Size
	Step	 Shift + Pause / Step /
	Slow	 Shift + Play /
	Vol+	 Vol+
	Mute	 Mute / Dimmer
	3D	 Shift + 3
	Ran	 D.Menu / Top
	Vol-	 Vol-
	N/P	 Red / Netflix / Search
	R/L	 Blue / Prime Video / Random
	A/B	 Yellow / YouTube / Repeat
	Repeat	 Green / APP / Repeat

Originale	Sostituto

