



 






















 









 

 

 

 

 

 






 


Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/Timer	 Blue / Prime Video / Random
 Format	 Picture / Format
 Res.	 D.Menu / Top
 TTX	 Text / Goto
 S-T	 Setup / OPT /
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold

Originale	Sostituto
 Rec	 Rec / Rec Mode
 PVR List	 Smart / List
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 EPG	 Guide / EPG / -/-
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Tv/Rad	 TV/Radio /
 Vol+	 Vol+
 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II
 Vol-	 Vol-





Originale		Sostituto	
	1	 TV	1
	2	 DVD	2
	3	 CD - STB	3
	4	 VIDEO	4
	5	 TAPE	5
	6	 TUNER	6
	7	 AUX - HDD	7
	8	 USB	8
	9	 BLUETOOTH	9
	FAV	 PC FAV MARKER	Fav / Marker / PC
	0	 HDMI - SAT	0
	Back	 RETURN BACK	Back / Return

Originale		Sostituto	

