



 







 

 









 





 

 







 

 







 

 

 



 

 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		1		1
	Mute		Mute / Dimmer		2		2
	PG+		CH+ / Page+		3		3
	DTV/VCR		Smart / List		Epg		Guide / EPG / -/-
	Vol+		Vol+		4		4
	PG-		CH- / Page-		5		5
	Info		Info / Angle		6		6
	Vol-		Vol-		Recall		Back / Return
	Menu		Menu / Home		7		7
	Up/Ch+		Up		8		8
	Exit		Exit / Cancel / Clear		9		9
	Left		Left		0		0
	Ok		OK		Audio		Audio / Lang I/II
	Right		Right		Tv/Radio		TV/Radio /
	Record		Rec / Rec Mode		Fav		Fav / Marker / PC
	Down/Ch-		Down		File		Display / Media
	Times Shift		Sleep / Timer		Text		Text / Goto





	Originale	Sostituto	Originale	Sostituto
	Subtitle	Subtitle / EQ		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Red	Red / Netflix / Search		
	Stop	Stop / Hold		
	Green	Green / APP / Repeat		
	Step	+ Shift + Pause / Step / Step /		
	Yellow	Yellow / YouTube / Repeat		
	Pause	Pause / Step / Freeze		
	Blue	Blue / Prime Video / Random		
	Play	Play / Slow		

