




















Originale	Sostituto
 Power	 Power
 Open / Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Angle	 Info / Angle
 7	 7
 8	 8
 9	 9
 Language	 Audio / Lang I/II
 R/L	 Blue / Prime Video / Random
 0	 0

Originale	Sostituto
 10+	 Guide / EPG / -/--
 Setup	 Setup / OPT /
 Mute	 Mute / Dimmer
 Clear	 Exit / Cancel / Clear
 Prog	 TV/Radio /
 Time	 Sleep / Timer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Title	 Sound / Title
 Menu	 Menu / Home
 Default	 AV / Input / RDS
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze






















Originale	Sostituto
On/Off	 Power
Audio Off	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Record	 Rec / Rec Mode
Rewind	 << / Tune-
F.Forward	 >> / Tune+
Prev.	 I<< / Preset-
Next	 >>I / Preset+
Title	 Sound / Title
Audio	 Audio / Lang I/II
Subt.	 Subtitle / EQ
Open/Close	 Eject / Surround
Auto/Track	 Picture / Format
Zoom	 Zoom / Size
Np	 Sleep / Timer

Originale	Sostituto
Progr.	 TV/Radio /
Top Menu	 D.Menu / Top
Setup	 Setup / OPT /
C/CH	 Text / Goto
DVD/TV	 AV / Input / RDS
Menu	 Menu / Home
Menu Up	 Up
Angle	 Info / Angle
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Pbc	 Exit / Cancel / Clear
Menu Down	 Down
Return	 Back / Return
Volume+	 Vol+
Resume	 Smart / List
Slow Up	 CH+ / Page+





Originale	Sostituto
On/Off	 Power
Audio Off	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Record	 Rec / Rec Mode
Rewind	 << / Tune-
F.Forward	 >> / Tune+
Prev.	 I<< / Preset-
Next	 >>I / Preset+
Title	 Sound / Title
Lang	 Audio / Lang I/II
Subt.	 Subtitle / EQ
Open/Close	 Eject / Surround
Auto/Track	 Picture / Format
Zoom	 Zoom / Size
Pbc	 Sleep / Timer

Originale	Sostituto
Progr.	 TV/Radio /
Top Menu	 D.Menu / Top
Setup	 Setup / OPT /
Resume	 Text / Goto
DVD/TV	 AV / Input / RDS
Menu	 Menu / Home
Menu Up	 Up
Angle	 Info / Angle
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Clear/00:00	 Exit / Cancel / Clear
Menu Down	 Down
Return	 Back / Return
Volume+	 Vol+
Mode	 Smart / List
Slow Up	 CH+ / Page+



