



Originale	Sostituto
Power	Power
Open / Close	Eject / Surround
OSD	Display / Media
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Angle	Info / Angle
7	7
8	8
9	9
Language	Audio / Lang I/II
R/L	Blue / Prime Video / Random
0	0

Originale	Sostituto
10+	Guide / EPG / -/--
Setup	Setup / OPT /
Mute	Mute / Dimmer
Clear	Exit / Cancel / Clear
Prog	TV/Radio /
Time	Sleep / Timer
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Title	Sound / Title
Menu	Menu / Home
Default	AV / Input / RDS
<<	<< / Tune-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze




























	Originale	Sostituto	Originale	Sostituto
		 I<< / Preset-		
		 >> / Tune+		
		 Stop / Hold		
		 >>  / Preset+		
		 Red / Netflix / Search		
		 Green / APP / Repeat		
		 Yellow / YouTube / Repeat		
		 Zoom / Size		
		 D.Menu / Top		
		 Shift + Pause / Step /		
		 Shift + Play /		
		 Vol+		
		 Smart / List		
		 Picture / Format		
		 Back / Return		
		 Vol-		

















 






 



Originale	Sostituto
On/Off	 Power
Audio Off	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Record	 Rec / Rec Mode
Rewind	 << / Tune-
F.Forward	 >> / Tune+
Prev.	 I<< / Preset-
Next	 >>I / Preset+
Title	 Sound / Title
Audio	 Audio / Lang I/II
Subt.	 Subtitle / EQ
Open/Close	 Eject / Surround
Auto/Track	 Picture / Format
Zoom	 Zoom / Size
Np	 Sleep / Timer

Originale	Sostituto
Progr.	 TV/Radio /
Top Menu	 D.Menu / Top
Setup	 Setup / OPT /
C/CH	 Text / Goto
DVD/TV	 AV / Input / RDS
Menu	 Menu / Home
Menu Up	 Up
Angle	 Info / Angle
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Pbc	 Exit / Cancel / Clear
Menu Down	 Down
Return	 Back / Return
Volume+	 Vol+
Resume	 Smart / List
Slow Up	 CH+ / Page+







































Originale	Sostituto	
Volume-	 Vol-	
Display	 Display / Media	
Slow Down	 CH- / Page-	
1	 1	
2	 2	
3	 3	
4	 4	
5	 5	
6	 6	
7	 7	
8	 8	
9	 9	
+10	 Guide / EPG / -/--	
0	 0	
R/L	 Fav / Marker / PC	
Search	 Red / Netflix / Search	
Repeat/1/All	 Green / APP / Repeat	

Originale	Sostituto	
Rep/A-B	 Yellow / YouTube / Repeat	
Shuffle	 Blue / Prime Video / Random	
Karaoke/Step	 Shift + Pause / Step /	
Echo+	 Shift + Up	
Echo-	 Shift + Down	
3D	 Shift + 3	
Video	 Shift + 4	





Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Resume	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Mode	 Smart / List
Pbc	 Sleep / Timer	Slow Up	 CH+ / Page+

Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Resume	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Mode	 Smart / List
Pbc	 Sleep / Timer	Slow Up	 CH+ / Page+





Originale	Sostituto	Originale	Sostituto
Volume-	Vol-		
Display	Display / Media		
Slow Down	CH- / Page-		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
+10	Guide / EPG / -/--		
0	0		
C/CH	Fav / Marker / PC		
Np	Red / Netflix / Search		
Repeat/1/All	Green / APP / Repeat		

Originale	Sostituto	Originale	Sostituto
Rep/A-B	Yellow / YouTube / Repeat		
R/L	Blue / Prime Video / Random		

