
 

 










 
 




 
 

 
 
 


Originale	Sostituto	
PWR On/Off		Power
Mute		Mute
TV		Smart
Video		Media
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Menu Down		Down
Back		Back
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1

Originale	Sostituto	
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Green		D. Menu
Yellow		Text

