

 
 




 



 


 







 
 











Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Menu Right	 Right
Mute	 Mute	Menu Off	 Exit
Txt Stop	 Stop	Menu Down	 Down
Update	 Smart	Back	 Back
Reveal	 Media	Volume+	 Vol +
Info	 Info	Chan.Up	 Ch +
Subt.List	 Subt	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Display	 Shift + Info	5	 5
Menu Up	 Up	6	 6
Menu Left	 Left	7	 7
OK Enter	 Ok	8	 8



Originale	Sostituto	Originale	Sostituto
9			
Guide -/-- 1.			
0/10			
2.Fav P/C 2.			
Red			
Green			
Yellow			
Blue			
Tone-			
Surround			
Level L			

