

























 



















Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	Menu Down	 Down
Mute	 Mute / Dimmer	Back	 Back / Return
App	 Shift + Green / APP /	Volume+	 Vol+
Info	 Info / Angle	CH/Page+	 CH+ / Page+
Subt.List	 Subtitle / EQ	Volume-	 Vol-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Video	 Shift + 4	CH/Page-	 CH- / Page-
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 Guide / EPG / -/-



Originale	Sostituto	Originale	Sostituto
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Dec/Pause	 Pause / Step / Freeze		
SAT Sky	 Smart / List		
	 >> / Preset+		
	 << / Preset-		

