



Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV/Radio		TV/Radio /
	0		0
	Fav		Fav / Marker / PC
	Vol+		Vol+
	Reclist		Setup / OPT /
	Reclist		Shift + Smart / List

Originale	Sostituto	Originale	Sostituto
	CH+		CH+ / Page+
	Vol-		Vol-
	Guide		Guide / EPG / -/--
	CH-		CH- / Page-
	Rec		Rec / Rec Mode
	MTS		Smart / List
	Aspect		Picture / Format
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Display		Display / Media
	Red		Red / Netflix / Search





Originale	Sostituto
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random
<< / Index	<< / Tune-
>> / TTX	Text / Goto
>> / TTX	>> / Tune+
I<< / Sub.Pg	I<< / Preset-
>>I / Reveal	>>I / Preset+
Stop / Hold	Stop / Hold
Play/Pause /	+ Shift + Exit / Cancel / Clear
Play/Pause /	Play / Slow
Size	Zoom / Size
Subtitle	Subtitle / EQ

Originale	Sostituto

