 


 


 
















 
 
 
 












 

 
Originale	Sostituto
 Power	 Power
 Netflix	 Media
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Eco	 3D
 Source	 AV
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Info	 Info
 Option	 Options
 Smart TV	 Smart
 Guide	 Guide
 Menu	 Menu
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Zoom+	 Shift + Ch +
 Zoom-	 Shift + Ch -





Originale	Sostituto	Originale	Sostituto
 List	 List	 Subtitle	 Subt
 Sleep	 Sleep	 Text	 Text
 PRE-CH	 Pre Ch		
 FAV	 Shift + Pre Ch		
 Rec	 Rec		
 I<	 I<<		
 Stop	 Stop		
 Play	 Play		
 >I	 >>I		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Lang	 Dual		

Originale	Sostituto	Originale	Sostituto
 Subtitle	 Subt	 Text	 Text

