 









 

 

 

 

 

 
 

 


 

 



 

 



 





Originale	Sostituto
 Power	 Power
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 T	 TV/R
 Mouse	 Options
 P+	 Ch +
 P-	 Ch -
 Home	 Smart
 Source	 AV
 Back	 Back
 ≡	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok

Originale	Sostituto
 Netflix	 Media
 ...	 Info
 Micro	 Guide

