












 

 










Originale	Sostituto
Standby / On	 Power
Muting	 Mute / Dimmer
Play / Pause	 Play / Slow
Play / Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
I<< / Tuning-	 << / Tune-
>>I / Tuning+	 >> / Tune+
I<< / Tuning-	 I<< / Preset-
>>I / Tuning+	 >>I / Preset+
Sleep	 Sleep / Timer
Program	 TV/Radio /
Input/Source	 AV / Input / RDS
MP3	 Up
I<< / Tuning-	 Left
Play / Pause	 OK
>>I / Tuning+	 Right
Stop	 Down

Originale	Sostituto
Volume+	 Vol+
Mode	 Smart / List
Next/Prog+	 CH+ / Page+
Volume-	 Vol-
Display	 Display / Media
Prev./Prog-	 CH- / Page-
Tape 1 Rec	 1
Tape 1 Rew	 2
Tape 1 Play	 3
Tape 1 F.FWD	 4
Tape 1 Hall/Ats	 5
CD/Theater	 Red / Netflix / Search
Repeat	 Green / APP / Repeat
Tape 2 Pre./eq	 Yellow / YouTube / Repeat
CD Random	 Blue / Prime Video / Random

