



Originale	Sostituto
 Power	 Power
 Sleep	 Sleep / Timer
 Play/Rec	 Rec / Rec Mode
 Clock/Timer	 Shift + Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 >10	 Guide / EPG / -/-
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel	 Exit / Cancel / Clear
 Play Mode	 Shift + Play / Slow

Slow

Originale	Sostituto
 Repeat	 Green / APP / Repeat
 Auto/Mono	 Audio / Lang I/II
 CD	 Shift + 3
 Tape	 Shift + 5
 EXT	 AV / Input / RDS
 Tuner	 Shift + 6
 Stop	 Stop / Hold
 </II	 Picture / Format
 Play	 Play / Slow
 Muting	 Mute / Dimmer
 I<</<<	 << / Tune-
 >>/>>I	 >> / Tune+
 Vol-	 Vol-
 Vol+	 Vol+

