










 

 

 

















 




 
 



 

 

 



 



 



 












Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Stop	 Stop
 FL Display	 Smart	 Pause	 Pause
 TUNER BAND	 Green	 Play	 Play
 AUX	 Red	 Disc Skip	 Sleep
 Top Menu	 D. Menu	 SFC	 Eject
 Menu	 Menu	 CH-	 Ch -
 Up	 Up	 CH+	 Ch +
 Left	 Left	 Vol+	 Vol +
 Enter	 Ok	 Vol-	 Vol -
 Right	 Right	 Muting	 Mute
 Down	 Down	 Subwoofer	 Shift + 4
 Display	 Info	 Action	 Options
 Return	 Back	 Subtitle	 Subt
 I<<	 I<<	 Audio	 Dual
 >>I	 >>I	 Angle	 Format
 <<	 <<	 Marker	 3D
 >>	 >>	 CH Select	 Shift + Media



 












 

 

 







 

 

 


 



Originale	Sostituto
TEST	Shift + 6
MIX 2ch	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
>10 / Enter	Guide
Disc	Pre Ch
Seat Position	Shift + 1
Center Focus	TV/R
Super Surround	Shift + 3

Originale	Sostituto
Pro Logic	Shift + 5
Disc Manager	List
Play Mode	Shift + Play
Cancel	Exit
Repeat	Text
A-B Repeat	Shift + Text
Cinema	Media
Timer	AV








 

 











 







 



 






Originale	Sostituto	Originale	Sostituto
 Power	 Power		
 TV Vol-	 Vol -		
 TV Vol+	 Vol +		
 TV / Video	 AV		
 CH+	 Ch +		
 CH-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 ≥10	 Guide		





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Play		Play
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	≥10		Guide				
	CH+		Ch +				
	CH-		Ch -				
	Stop		Stop				
	<<		<<				
	>>		>>				

