 

 





 









 









 









 

 





 

 









































 

 

 

 



|   | Originale      | Sostituto  |
|---|----------------|--|
|    | Power Receiver |  Power        |
|    | Tuner          |  Shift + 6    |
|    | CD             |  Shift + 3    |
|    | VCR            |  Shift + 4    |
|    | TV             |  Shift + 1    |
|    | Tape Monitor   |  Shift + 5    |
|    | Disc           |  OK           |
|    | Direct Tuning  |  Smart / List |
|    | 1 Tuner        |  1            |
|    | 2 Tuner        |  2            |
|   | 3 Tuner        |  3           |
|  | 4 Tuner        |  4          |
|  | 5 Tuner        |  5          |
|  | 6 Tuner        |  6          |
|  | 7 Tuner        |  7          |
|  | 8 Tuner        |  8          |
|  | 9 Tuner        |  9          |

|   | Originale       | Sostituto   |
|---|-----------------|---|
|  | 0 Tuner         |  0                 |
|  | ≥10 / -/+ Tuner |  Guide / EPG / -/+ |
|  | Muting          |  Mute / Dimmer     |
|  | Volume -        |  Vol-              |
|  | Volume +        |  Vol+              |





|   | Originale      | Sostituto  |
|---|----------------|--|
|    | Power Receiver |  Power        |
|    | Tuner          |  Shift + 6    |
|    | CD             |  Shift + 3    |
|    | VCR            |  Shift + 4    |
|    | TV             |  Shift + 1    |
|    | Tape Monitor   |  Shift + 5    |
|    | Disc           |  OK           |
|    | Direct Tuning  |  Smart / List |
|    | 1 CD           |  1            |
|    | 2 CD           |  2            |
|   | 3 CD           |  3           |
|  | 4 CD           |  4          |
|  | 5 CD           |  5          |
|  | 6 CD           |  6          |
|  | 7 CD           |  7          |
|  | 8 CD           |  8          |
|  | 9 CD           |  9          |

|   | Originale       | Sostituto   |
|---|-----------------|---|
|  | 0 CD            |  0                   |
|  | ≥10 / - / - CD  |  Guide / EPG / - / - |
|  | Fast Reverse CD |  << / Tune-          |
|  | Fast Forward CD |  >> / Preset+        |
|  | Stop CD         |  Stop / Hold         |
|  | Play CD         |  Play / Slow         |
|  | Muting          |  Mute / Dimmer       |
|  | Volume -        |  Vol-                |
|  | Volume +        |  Vol+                |

