



 



 































































Originale	Sostituto	Originale	Sostituto
 Power Receiver	 Power	 3 Stereo	 Audio / Lang I/II
 Power Audio	 Red / Netflix / Search	 Test	 Text / Goto
 Power TV	 Blue / Prime Video / Random	 CH Select	 Setup / OPT /
 Power VCR	 Shift + Red / Netflix /	 Help	 Info / Angle
 Power VDP	 Yellow / YouTube / Repeat	 Disc	 Smart / List
 Power CD	 Green / APP / Repeat	 Disc Enter	 Display / Media
 Power TAPE	 Shift + Green / APP /	 TV / AV	 AV / Input / RDS
 TUNER	 Shift + 6	 TUNER 1	 1
 CD	 Shift + 3	 TUNER 2	 2
 TAPE	 Shift + 5	 TUNER 3	 3
 TV	 Shift + 1	 Direct Tuning	 Menu / Home
 VDP / VDP 6CH	 Shift + 2	 TV Vol+	 Shift + Vol+
 VCR 1	 Shift + 4	 TUNER 4	 4
 VCR 2	 Shift + 7	 TUNER 5	 5
 CH Level-	 CH- / Page-	 TUNER 6	 6
 CH Level+	 CH+ / Page+	 TUNER ≥=10	 Guide / EPG / -/-
 Surround	 Eject / Surround	 TV Vol-	 Shift + Vol-































 



 

 

 








 
 
 
 


 




















Originale	Sostituto	Originale	Sostituto
Power Receiver	Power	3 Stereo	Audio / Lang I/II
Power Audio	Red / Netflix / Search	Test	Text / Goto
Power TV	Blue / Prime Video / Random	CH Select	Setup / OPT /
Power VCR	Shift + Red / Netflix /	Help	Info / Angle
Power VDP	Yellow / YouTube / Repeat	Disc	Smart / List
Power CD	Green / APP / Repeat	Disc Enter	Display / Media
Power TAPE	Shift + Green / APP /	TV / AV	AV / Input / RDS
TUNER	Shift + 6	CD 1	1
CD	Shift + 3	CD 2	2
TAPE	Shift + 5	CD 3	3
TV	Shift + 1	Direct Tuning	Menu / Home
VDP / VDP 6CH	Shift + 2	TV Vol+	Shift + Vol+
VCR1	Shift + 4	CD 4	4
VCR 2	Shift + 7	CD 5	5
CH Level-	CH- / Page-	CD 6	6
CH Level+	CH+ / Page+	CD >=10	Guide / EPG / -/-
Surround	Eject / Surround	TV Vol-	Shift + Vol-









 



 





























































Originale	Sostituto	Originale	Sostituto
 Power Receiver	 Power	 3 Stereo	 Audio / Lang I/II
 Power Audio	 Red / Netflix / Search	 Test	 Text / Goto
 Power TV	 Blue / Prime Video / Random	 CH Select	 Setup / OPT /
 Power VCR	 Shift + Red / Netflix /	 Help	 Info / Angle
 Power VDP	 Yellow / YouTube / Repeat	 Disc	 Smart / List
 Power CD	 Green / APP / Repeat	 Disc Enter	 Display / Media
 Power TAPE	 Shift + Green / APP /	 TV / AV	 AV / Input / RDS
 TUNER	 Shift + 6	 VDP 1	 1
 CD	 Shift + 3	 VDP 2	 2
 TAPE	 Shift + 5	 VDP 3	 3
 TV	 Shift + 1	 Direct Tuning	 Menu / Home
 VDP / VDP 6CH	 Shift + 2	 TV Vol+	 Shift + Vol+
 VCR1	 Shift + 4	 VDP 4	 4
 VCR 2	 Shift + 7	 VDP 5	 5
 CH Level-	 CH- / Page-	 VDP 6	 6
 CH Level+	 CH+ / Page+	 VDP ≥=10	 Guide / EPG / -/-
 Surround	 Eject / Surround	 TV Vol-	 Shift + Vol-







Originale	Sostituto	Originale	Sostituto
 Power Receiver	 Power	 3 Stereo	 Audio / Lang I/II
 Power Audio	 Red / Netflix / Search	 Test	 Text / Goto
 Power TV	 Blue / Prime Video / Random	 CH Select	 Setup / OPT /
 Power VCR	 Shift + Red / Netflix /	 Help	 Info / Angle
 Power VDP	 Yellow / YouTube / Repeat	 Disc	 Smart / List
 Power CD	 Green / APP / Repeat	 Disc Enter	 Display / Media
 Power TAPE	 Shift + Green / APP /	 TV / AV	 AV / Input / RDS
 TUNER	 Shift + 6	 VCR 1 1	 1
 CD	 Shift + 3	 VCR 1 2	 2
 TAPE	 Shift + 5	 VCR 1 3	 3
 TV	 Shift + 1	 Direct Tuning	 Menu / Home
 VDP / VDP 6CH	 Shift + 2	 TV Vol+	 Shift + Vol+
 VCR1	 Shift + 4	 VCR 1 4	 4
 VCR 2	 Shift + 7	 VCR 1 5	 5
 CH Level-	 CH- / Page-	 VCR 1 6	 6
 CH Level+	 CH+ / Page+	 VCR 1 ≥=10	 Guide / EPG / -/-
 Surround	 Eject / Surround	 TV Vol-	 Shift + Vol-



