




 








 

















Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 V+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Originale	Sostituto
 V-	 Vol-
 World/Internet	 Smart / List
 P-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Music/Camera	 Display / Media
 TV Guide	 Guide / EPG / -/-
 */O	 Shift + 1
 */Q	 Shift + 2





Originale	Sostituto
 [=]/Text	 GOTO TEXT Text / Goto
 Red	 NETFLIX SEARCH Red / Netflix / Search
 Green	 APP REPEAT Green / APP / Repeat
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat
 Blue	 Prime Video RANDOM Blue / Prime Video / Random
 LANG.	 LANG I/II AUDIO Audio / Lang I/II
 [=]..	 TITLE SOUND Sound / Title
 [-O-]	 OPT-TOOLS SETUP Setup / OPT /
 <<	 TUNE- << / Tune-
	 STEP-FREEZE Pause / Step / Freeze
 >>	 TUNE+ >> / Tune+
 [Red dot]	 REC MODE Rec / Rec Mode
 ▶	 SLOW ▶ Play / Slow
 ■	 HOLD ■ Stop / Hold

Originale	Sostituto

