
 


 





| Originale | Sostituto |
|--|--|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  REC |  Rec / Rec Mode |
|  0 / AV |  0 |
|  0 / AV |  AV / Input / RDS |
|  OPT |  Setup / OPT / |
|  Red / << |  << / Tune- |
|  Red / << |  Red / Netflix / Search |

| Originale | Sostituto |
|---|---|
|  Green / Stop |  Stop / Hold |
|  Green / Stop |  Green / APP / Repeat |
|  Yellow / |  Play / Slow |
|  Yellow / |  Yellow / YouTube / Repeat |
|  Blue / Aspect / |  Picture / Format |
|  Blue / Aspect / |  Blue / Prime Video / Random |
|  Blue / Aspect / |  >> / Tune+ |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  SFI / EPG |  Guide / EPG / -/- |
|  Exit / Recall |  Exit / Cancel / Clear |
|  Exit / Recall |  Back / Return |
|  Info |  Info / Angle |
|  Prog + |  CH+ / Page+ |





 







 



 

 

 


 


 

 

 

 

 

 

| Originale | Sostituto |
|--|--|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  REC |  Rec / Rec Mode |
|  0 / AV |  AV / Input / RDS |
|  0 / AV |  0 |
|  OPT |  Setup / OPT / |
|  Red / << |  << / Tune- |
|  Red / << |  Red / Netflix / Search |

| Originale | Sostituto |
|---|---|
|  Green / Stop |  Green / APP / Repeat |
|  Green / Stop |  Stop / Hold |
|  Yellow / |  Play / Slow |
|  Yellow / |  Yellow / YouTube / Repeat |
|  Blue / >> / |  >> / Tune+ |
|  Blue / >> / |  Picture / Format |
|  Blue / >> / |  Blue / Prime Video / Random |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  SFI / EPG |  Guide / EPG / -/- |
|  Exit / Recall |  Exit / Cancel / Clear |
|  Exit / Recall |  Back / Return |
|  Info |  Info / Angle |
|  Prog + |  CH+ / Page+ |





| Originale | Sostituto |
|--|--|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  REC |  Rec / Rec Mode |
|  0 / AV |  AV / Input / RDS |
|  0 / AV |  0 |
|  OPT |  Setup / OPT / |
|  Red / << |  Red / Netflix / Search |
|  Red / << |  << / Tune- |

| Originale | Sostituto |
|---|---|
|  Green / Stop |  Green / APP / Repeat |
|  Green / Stop |  Stop / Hold |
|  Yellow / |  Play / Slow |
|  Yellow / |  Yellow / YouTube / Repeat |
|  Blue / >> / |  Blue / Prime Video / Random |
|  Blue / >> / |  Picture / Format |
|  Blue / >> / |  >> / Tune+ |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  SFI / EPG |  Guide / EPG / -/- |
|  Exit / Recall |  Exit / Cancel / Clear |
|  Exit / Recall |  Back / Return |
|  Info |  Info / Angle |
|  Prog + |  CH+ / Page+ |



