


























 

 









































Originale	Sostituto	Originale	Sostituto
Power	 Power	Vol-	 Vol-
Mute	 Mute / Dimmer	PR-	 CH- / Page-
Audio	 Audio / Lang I/II	1	 1
SUBT	 Subtitle / EQ	2	 2
Tv/Radio	 TV/Radio /	3	 3
TXT	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Up	 Up	6	 6
i	 Info / Angle	7	 7
Left	 Left	8	 8
OK	 OK	9	 9
Right	 Right	EPG	 Guide / EPG / -/--
ESC	 Exit / Cancel / Clear	0	 0
Down	 Down	FAV	 Fav / Marker / PC
↔	 Back / Return	Red	 Red / Netflix / Search
Vol+	 Vol+	Green	 Green / APP / Repeat
PR+	 CH+ / Page+	Yellow	 Yellow / YouTube / Repeat










Originale	Sostituto	Originale	Sostituto
Blue	 Blue / Prime Video / Random		



Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	TV/SAT	 Smart / List
Mute	 Mute / Dimmer	CH/Page+	 CH+ / Page+
Audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Sleep Timer	 Sleep / Timer	CH/Page-	 CH- / Page-
Radio	 TV/Radio /	1. ?	 1
Text	 Text / Goto	2abc	 2
Menu	 Menu / Home	3def	 3
Menu Up	 Up	4ghi	 4
Info	 Info / Angle	5jkl	 5
Menu Left	 Left	6mno	 6
OK Enter	 OK	7pqrm	 7
Menu Right	 Right	8tuv	 8
Exit	 Exit / Cancel / Clear	9wxyz	 9
Menu Down	 Down	Guide Pilote	 Guide / EPG / -/--
Back	 Back / Return	0/10	 0
Volume+	 Vol+	FAV Pref.	 Fav / Marker / PC



Originale	Sostituto	Originale	Sostituto
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
TV	 Shift + 1		
Video	 Shift + 4		
Epg	 Shift + Guide / EPG / -/--		

