
 
 


 






 

 




 
 











 
 

 






 

 









 
 
 







 




Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Slow Up	 Ch +	Menu Down	 Down
Stop	 Stop	Volume+	 Vol +
Pause	 Pause	Progr.	 Sleep
Subt.	 Subt	Next	 >>
Auto/Track	 Media	Volume-	 Vol -
Rep/A-B	 +  Shift + Text	Prev.	  <<
Title	 List	Top Menu	 D. Menu
Pepeat/1/All	 Text	1	 1
Zoom	 +  Shift + Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Originale	Sostituto	
8		8
9		9
+10		Guide
0		0
C/CH		Pre Ch
ON/Off	 + 	Shift + Power
Open/Close		Eject
Resume	 + 	Shift + Play
Record		Rec
Play		Play
Karaoke/Step	 + 	Shift + Pause
Rewind		<<
Play/Back	 + 	Shift + Stop
Np	 + 	Shift + Subt
F.Forward		>>
Setup		Options
Video	 + 	Shift + D. Menu

Originale	Sostituto	
Input Source	 + 	Shift + AV
Search	 + 	Shift + Up
Mode		3D
R/L	 + 	Shift + Info
Key-	 + 	Shift + Left
Auto Scan	 + 	Shift + Ok
Key+	 + 	Shift + Right
Syst.Preset		Smart
Store	 + 	Shift + Down
Vocal/Assist	 + 	Shift + Vol +
Echo+	 + 	Shift + Ch +
Tone	 + 	Shift + Vol -
Audio		Dual
Echo-	 + 	Shift + Ch -
5.1Ch	 + 	Shift + 1
2.1Ch	 + 	Shift + 2
Pro Logic	 + 	Shift + 3



Originale	Sostituto	Originale	Sostituto
NTSC/PAL	 Format		
Effect	 +  Shift + 5		
EQ	 +  Shift + 6		
Dimmer	 +  Shift + Mute		
Erase	 Green		
Mark	 Red		
Clear/00:00	 Exit		
Digest	 +  Shift + Guide		
Lang	 +  Shift + Dual		
Shuffle	 Blue		
Random	 Yellow		

