



Originale	Sostituto
	 Mute / Dimmer
	 Power
	 Display / Media
	 AV / Input / RDS
	 Shift + Pause / Step / Step
	 Exit / Cancel / Clear
	 Guide / EPG / -/-
	 Text / Goto
	 Subtitle / EQ
	 Picture / Format
	 Setup / OPT /
	 Up
	 Audio / Lang I/II
	 Left
	 OK
	 Right
	 Menu / Home

Originale	Sostituto
	 Down
	 Info / Angle
	 CH- / Page-
	 CH+ / Page+
	 Vol-
	 Vol+
	 Red / Netflix / Search
	 Shift + CH+ /
	 Smart / List
	 Green / APP / Repeat
	 Shift + CH- /
	 Sound / Title
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 1
	 2
	 3




Originale
Sostituto

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Fav.		Fav / Marker / PC
	0		0
	P<P		Back / Return
	<<		<< / Tune-
	>>		>> / Tune+
	Timers		Sleep / Timer
	Lib.		D.Menu / Top
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode

Originale
Sostituto

