 




 







 















 



| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  TV |  TV/Radio / |
|  0 |  0 |
|  Recall |  Shift + Back / Return |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  PR+ |  CH+ / Page+ |

| Originale | Sostituto |
|---|---|
|  Vol- |  Vol- |
|  World/Internet |  Smart / List |
|  PR- |  CH- / Page- |
|  Menu |  Menu / Home |
|  Q.Menu |  D.Menu / Top |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Back |  Back / Return |
|  Exit |  Exit / Cancel / Clear |
|  i |  Info / Angle |
|  Camera/Music/Ph |  Picture / Format |
|  Guide |  Guide / EPG / -/- |
|  */o |  Shift + Guide / EPG / -/- |
|  */o.. |  Fav / Marker / PC |





| | Originale | Sostituto | Originale | Sostituto |
|---|-----------|--|-----------|-----------------------------|
|  | [≡]/Text |  GOTO TEXT | | Text / Goto |
|  | Red |  NETFLIX SEARCH | | Red / Netflix / Search |
|  | Green |  APP REPEAT | | Green / APP / Repeat |
|  | Yellow |  YouTube REPEAT A-B | | Yellow / YouTube / Repeat |
|  | Blue |  Prime Video RANDOM | | Blue / Prime Video / Random |
|  | Lang |  LANG I/II AUDIO | | Audio / Lang I/II |
|  | [≡].. |  SHIFT + GOTO TEXT | | Shift + Text / |
|  | [-o-] |  OPT-TOOLS SETUP | | Setup / OPT / |
|  | << |  TUNE- TUNE- | | << / Tune- |
|  | Pause |  STEP-FREEZE STEP-FREEZE | | Pause / Step / Freeze |
|  | >> |  TUNE+ TUNE+ | | >> / Tune+ |
|  | Rec |  REC MODE REC MODE | | Rec / Rec Mode |
|  | Play |  SLOW SLOW | | Play / Slow |
|  | Stop |  HOLD HOLD | | Stop / Hold |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

