





 

 


 

 








 

 
 

 










Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Lang	 Dual
 [≡]...	 Subt
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Smart/Colors	 Media

Originale	Sostituto
 P+	 Ch +
 P-	 Ch -
 Home	 Smart
 [G]	 Guide
 i	 Info
 ←	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Netflix	 Shift + Media
 You Tube	 Shift + Smart
 Menu	 Menu
 Source	 AV
 Red	 Red



