
 

 



 











 





 






 
 




Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Timer	 AV
 EPI	 Guide
 SUBTL	 Subt
 Audio	 Shift + Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 16:9	 Format
 Lang	 Dual
 RCL	 Back
 FAV	 Pre Ch
 Page+ / Timeshift	 Shift + Ch +
 Page- / V-Format	 Shift + Ch -
 Page- / V-Format	 Shift + Format
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu





Originale	Sostituto
Info	Info
TXT	Text
Exit	Exit
Red / SAT	Red
Green / Zoom	Green
Green / Zoom	Eject
Yellow / Pause	Yellow
Yellow / Pause	Shift + Pause
Blue / TV/Radio	Blue
Blue / TV/Radio	TV/R
<<<	<<<
>>>	>>>
Play / Pause	Play
Play / Pause	Pause
Stop	Stop
I<<<	I<<<
>>>I	>>>I

Originale	Sostituto
Slow	Shift + Play
Rec	Rec
Media	Media
Game	Smart
PVR	Shift + Smart
HDD	Shift + Media

