



Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
EPG	Guide
Info	Info
Vol+	Vol +
Vol-	Vol -
Mute	Mute
TV / Radio	TV/R

Originale	Sostituto
Prog+	Ch +
Prog-	Ch -
Menu	Menu
List	List
Back	Back
Exit	Exit
Up	Up
Left	Left
OK	Ok
Right	Right
Down	Down
Red / Timer	Red
Red / Timer	AV
Green / FAV	Green
Green / FAV	Pre Ch
Yellow / Repeat	Yellow
Blue / Goto	Blue



