

 
 
 



 
 
 



Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info
 Back	 Back
 Menu	 Menu
 Exit	 Exit
 Up	 Up

Originale	Sostituto
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 EPG	 Guide
 TV/Radio	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Rec	 Rec
 Fav	 Pre Ch
 Stop	 Stop
 Media	 Media
 I<<	 I<<
 >>I	 >>I
 >>	 >>





Originale	Sostituto	Originale	Sostituto
	<<		<<
	Play		Play
	Pause		Pause
	TTX		Text
	Audio		Dual
	Subtitle		Subt
	USB		Smart
	Timer		AV

