



 


 




 





Originale	Sostituto	Originale	Sostituto
	On		Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Stop		Stop
	Play		Play
	Pause		Pause
	I<<		I<<
	>>I		>>I
	Record		Rec
	Open/Close		Eject
	Disc Skip		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	EQ		Red
	B.Boost		Green
	Band		Yellow
	FM ST		Blue
	Source		AV
	CD Info		Info
	Prog		Shift + Sleep
	Intro/CT		Ok
	Repeat/RDS		Text
	PTY		Media
	ADD		Dual
	DEL		Exit
	Clock		Options
	Timer		Shift + AV
	Sleep		Sleep

