




 
 
 

Originale	Sostituto	Originale	Sostituto
Power	Power	Menu	Menu / Home
Mute	Mute / Dimmer	Up/PR+	Up
1	1	PR+	CH+ / Page+
2	2	List	Smart / List
3	3	Vol-	Vol-
4	4	Left	Left
5	5	OK	OK
6	6	Right	Right
7	7	Vol+	Vol+
8	8	Sleep	Sleep / Timer
9	9	Down/PR-	Down
*(Left)	Shift + Left	PR-	CH- / Page-
0	0	P<P	Back / Return
*(Right)	Shift + Right	Tv/AV	AV / Input / RDS
[ ]/Picture	Picture / Format	Tv/PC	TV/Radio /
/j/Sound	Sound / Title	[<>]/ARC	Shift + Picture / Format
I-II	Audio / Lang I/II	Red	Red / Netflix / Search

Originale	Sostituto	Originale	Sostituto
Power	Power	Menu	Menu / Home
Mute	Mute / Dimmer	Up/PR+	Up
1	1	PR+	CH+ / Page+
2	2	List	Smart / List
3	3	Vol-	Vol-
4	4	Left	Left
5	5	OK	OK
6	6	Right	Right
7	7	Vol+	Vol+
8	8	Sleep	Sleep / Timer
9	9	Down/PR-	Down
*(Left)	Shift + Left	PR-	CH- / Page-
0	0	P<P	Back / Return
*(Right)	Shift + Right	Tv/AV	AV / Input / RDS
[ ]/Picture	Picture / Format	Tv/PC	TV/Radio /
/j/Sound	Sound / Title	[<>]/ARC	Shift + Picture / Format
I-II	Audio / Lang I/II	Red	Red / Netflix / Search





Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [≡]/Text	 Text / Goto
 [.=]/Mix	 Shift + Text /
 [≡◆]/Size	 Zoom / Size
 [≡i]/Index	 Info / Angle
 [≡x]/Update	 Rec / Rec Mode
 [≡o]/Time	 Pause / Step / Freeze
 [≡?]/Reveal	 Play / Slow
 [≡+]/Hold	 Stop / Hold
 [■]/PIP	 Display / Media
 [ :■]/Input	 Shift + AV / Input / RDS
 [ /■]/Swap	 Shift + Back / Return
 PIP PR+	 Shift + CH+ /
 [-■]/Position	 Shift + Display / Media
 [.=]/Mode	 Shift + Smart / List

Originale	Sostituto
 *(Down)	 Shift + Down
 PIP PR-	 Shift + CH- /

