 






 
 
 
 
 
 

 



 



 

 
 
 


 

 
 

 


 


 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Analog		Shift + TV/R
	1		1		Digital		TV/R
	2		2		Return		Back
	3		3		Exit		Exit
	4		4		Up		Up
	5		5		Left / Z -		Left
	6		6		Right / Z +		Right
	7		7		Down		Down
	8		8		OK		Ok
	9		9		Menu		Menu
	0		0		Presets		Smart
	AV		AV		List		List
	Mute		Mute		Info		Info
	PR +		Ch +		Guide		Guide
	PR -		Ch -		Red		Red
	Vol +		Vol +		Green		Green
	Vol -		Vol -		Yellow		Yellow





Originale	Sostituto	Originale	Sostituto
 Blue	 Blue		
 Purple / Text	 Text		

