


Originale	Sostituto
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	TV/Radio /
	D.Menu / Top
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up
	Left
	OK
	Right

Originale	Sostituto
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8

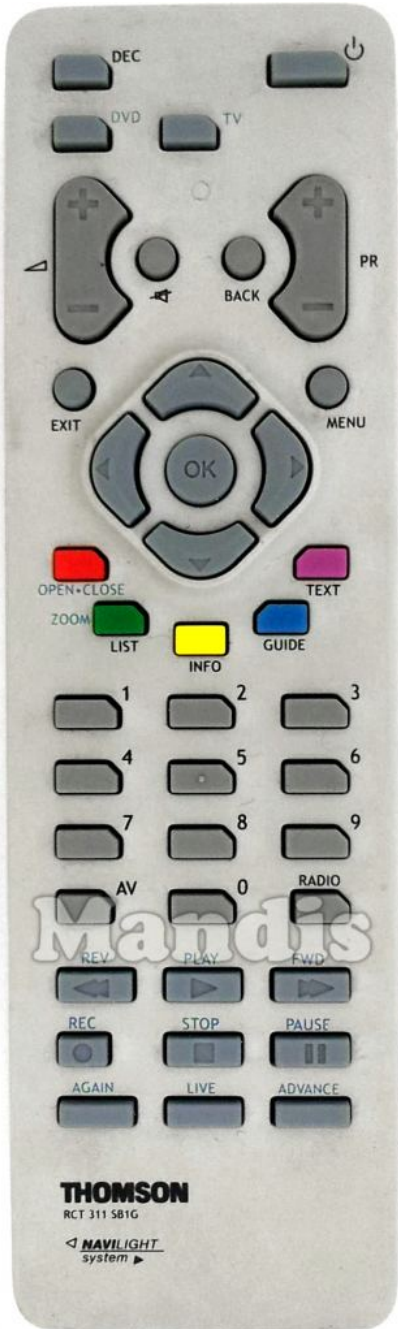




 





 

 

 


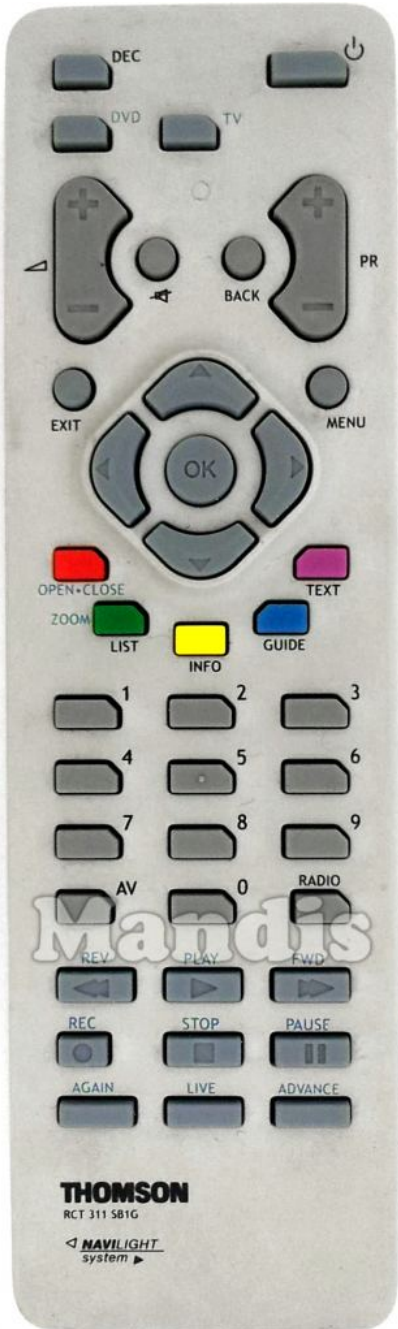
 
 


 









Originale		Sostituto	
	9		9
	0		0
OPEN-CLOSE	Red/Open/Close		Red / Netflix / Search
ZOOM LIST	Green/Zoom/Lis		Green / APP / Repeat
INFO	Yellow/Info		Yellow / YouTube / Repeat
GUIDE	Blue/Guide		Blue / Prime Video / Random
	Radio	+	Shift + TV/Radio / Program
	Again	+	Shift + Back / Return
	DVD	+	Shift + 2

Originale		Sostituto	






Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 TV	 TV/Radio /
 Dec	 D.Menu / Top
 Violet/Text	 Text / Goto
 AV	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right

Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 Live	 Smart / List
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Advance	 Display / Media
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8




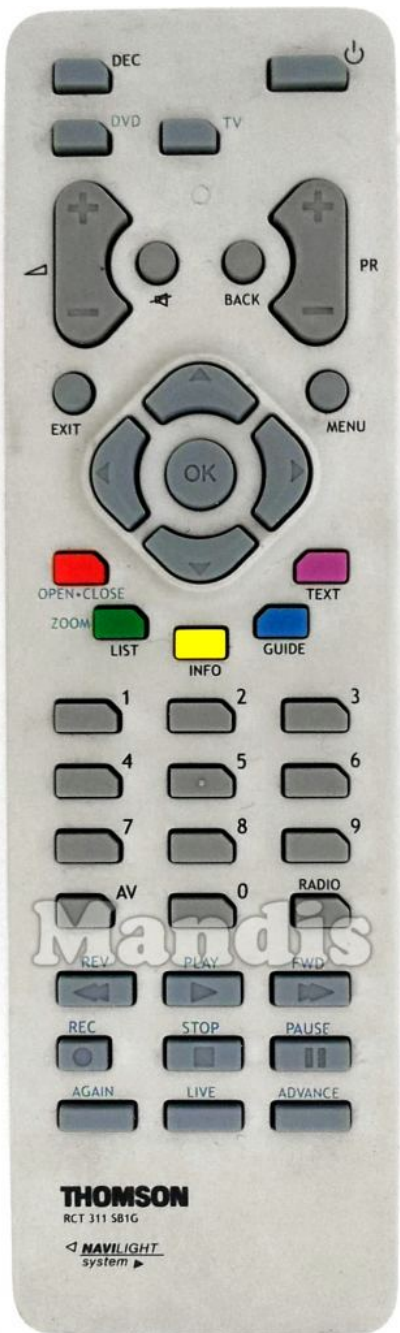

Originale		Sostituto	
	9		9
	0		0
OPEN-CLOSE	Red/Open/Close		Red / Netflix / Search
ZOOM LIST	Green/Zoom/Lis		Green / APP / Repeat
INFO	Yellow/Info		Yellow / YouTube / Repeat
GUIDE	Blue/Guide		Blue / Prime Video / Random
	Radio		Shift + TV/Radio / Program
	Again		Shift + Back / Return
	DVD		Shift + 2

Originale		Sostituto	



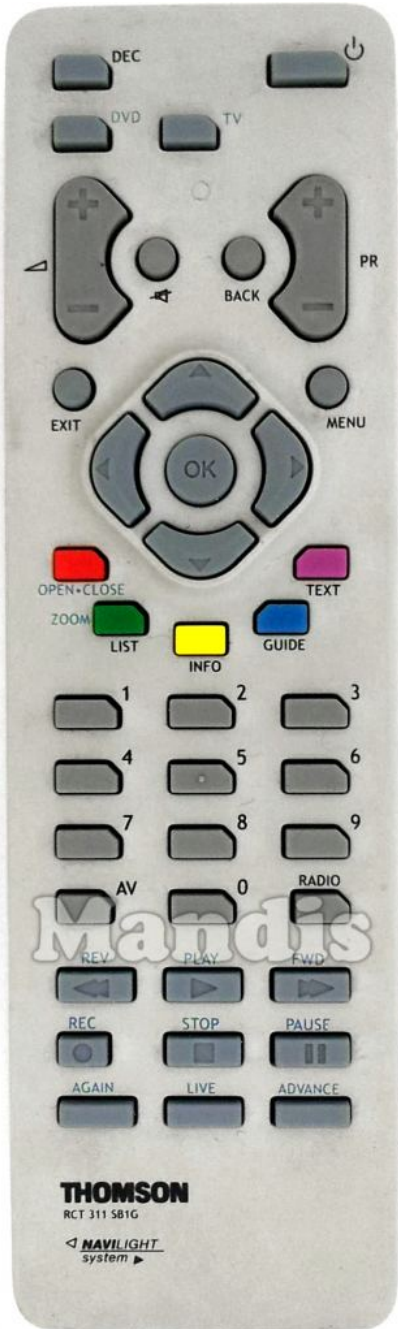

Originale	Sostituto
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	TV/Radio /
	D.Menu / Top
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up
	Left
	OK
	Right

Originale	Sostituto
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8



