 
 





 



 

 



 

 











 

 

 

 









 

 





 







 



 



Originale		Sostituto		Originale		Sostituto	
	Input		AV / Input / RDS		AD		Shift + AV / Input / RDS
	Power		Power		0		0
	→[/]←		Shift + OK		Recall		Back / Return
	[<>]		Picture / Format		Vol+		Vol+
	O/I/II		Shift + Audio / Lang I/II		[i+]		Info / Angle
	TV		TV/Radio /		P+		CH+ / Page+
	List		Smart / List		Vol-		Vol-
	More Info		Shift + Info / Angle		Mute		Mute / Dimmer
	1		1		P-		CH- / Page-
	2		2		Quick		Shift + Exit / Cancel / Clear
	3		3		Guide		Guide / EPG / -/-
	4		4		↑		Shift + Up
	5		5		Exit		Exit / Cancel / Clear
	6		6		←		Shift + Left
	7		7		Up		Up
	8		8		→		Shift + Right
	9		9		Left		Left





Originale	Sostituto
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 ↓	 Shift + Down
 Return	 Shift + Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Media Player	 Display / Media
 Subtitle	 Subtitle / EQ
 <</[≡+]	 << / Tune-
 Play	 Play / Slow
 >>/[≡◇]	 >> / Tune+
 <</[≡?]	 << / Preset-

Originale	Sostituto
 Stop	 Stop / Hold
 Pause/Step/[▼]	 Pause / Step / Freeze
 >> /[O]/[≡x]	 >> / Preset+
 Power Regza Link	 Shift + Power
 Audio Regza Link	 Audio / Lang I/II
 Set Up Regza Link	 Setup / OPT /
 Open/Close Regza Link	 Eject / Surround
 Root Regza Link	 Sleep / Timer
 Contens Regza	 Shift + D.Menu / Top Menu
 Top Regza Link	 D.Menu / Top
 DVD Regza Link	 Shift + 2

