












Originale	Sostituto
 STANDBY/ON	 Power
 OPEN/CLOSE	 Eject / Surround
 SETUP	 Setup / OPT /
 MUTE	 Mute / Dimmer
 REPEAT	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 SHUFFLE	 Blue / Prime Video / Random
 SLEEP	 Sleep / Timer
 DISPLAY	 Display / Media
 TOP	 Back / Return
 MENU/PBC	 Menu / Home
 SUBTITLE	 Subtitle / EQ
 AUDIO	 Audio / Lang I/II
 ZOOM	 Zoom / Size
 ANGLE	 Info / Angle
 Up	 Up
 Down	 Down

Originale	Sostituto
 Left	 Left
 Right	 Right
 ENTER	 OK
 I> SLOW/PROG	 Shift + >>I / Preset+
 PLAY	 Play / Slow
 PAUSE	 Pause / Step / Freeze
 STOP	 Stop / Hold
 I<< PRESET	 I<< / Preset-
 >>I PRESET	 >>I / Preset+
 << TUNNING	 << / Tune-
 >> TUNNING	 >> / Tune+
 TIMER	 Shift + Sleep / Timer
 SOURCE	 AV / Input / RDS
 CM SKIP	 Shift + Display / Media
 STEP	 Shift + Pause / Step /
 1	 1
 2	 2





Originale		Sostituto	
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SEARCH		Red / Netflix / Search
	SURROUND	 + 	Shift + Eject / Surround
	CLEAR		Exit / Cancel / Clear
	EDIT		Text / Goto
	SELECT	 + 	Shift + OK
	EQ	 + 	Shift + Subtitle / EQ
	RECORD		Rec / Rec Mode
	REC MODE	 + 	Shift + Rec / Rec Mode
	CH-		CH- / Page-

Originale		Sostituto	
	CH+		CH+ / Page+
	VOL-		Vol-
	VOL+		Vol+

