

 
 

 



 



 


 
 
 
 



 











 










 


 





 



 




 







Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -	 Shift + Guide
 Recall	 Pre Ch
 Nicam / A2	 Shift + Dual
 Aspect	 Format
 P Mode	 Shift + Format

Originale	Sostituto
 S Mode	 Dual
 Display	 Info
 CH +	 Ch +
 CH -	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -
 Freeze	 Shift + Pause
 Source	 AV
 Media	 Media
 Text	 Text
 Sleep	 Sleep
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Menu	 Menu





Originale	Sostituto
Exit	Exit
Red / Open/Close	Red
Red / Open/Close	+ Shift + Exit
Green /	Green
Green /	D. Menu
Yellow /	Yellow
Yellow /	Options
Blue / A-B	Blue
Blue / A-B	Back
Hold / DTV/Radio	+ Shift + Stop
Hold / DTV/Radio	TV/R
Reveal / PVR.List	Smart
Size / Rec	Rec
Size / Rec	3D
Index / Guide	+ Shift + Info
Index / Guide	Guide
Subtitle	Subt

Originale	Sostituto
S.Page / CH.List	+ Shift + Subt
S.Page / CH.List	List
Play / Pause	Play
Play / Pause	Pause
Stop	Stop
Fav / <<	<<
Fav / <<	+ Shift + Pre Ch
>>	>>
I<< / Time Shift	I<<
>>	>>

