







 





 

 

 

 

 



 






Originale	Sostituto
 Power	 Power
 Info	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Zoom	 0
 0 / Zoom	 Eject
 Audio	 Dual
 Mute	 Mute
 Recall	 Back
 FAV	 Pre Ch

Originale	Sostituto
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu
 Exit	 Exit
 Blue / Pause	 Blue
 Blue / Pause	 Pause
 Red / Text	 Red
 Red / Text	 Text
 Multivideo	 Smart
 Yellow / Subtitle	 Yellow





















 




 




 

Originale	Sostituto
 Yellow / Subtitle	 Subt
 TV / AV	 AV
 Green / P/N	 Green
 SAT	 Media
 TV / Radio	 TV/R
 EPG	 Guide

Originale	Sostituto



 

 

 

 

 






 


Originale	Sostituto
 Power	 Power
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 TV/SAT	 AV
 TV/Radio	 TV/R
 Zoom	 Eject
 List	 List
 Audio	 Dual
 EPG	 Guide
 Timer	 Shift + AV
 Text	 Text
 Exit	 Exit
 Menu	 Menu
 M/P	 Media
 Mute	 Mute

Originale	Sostituto
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 >>
 P-	 <<
 Recall	 Pre Ch
 FAV	 Shift + Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4





	Originale	Sostituto	Originale	Sostituto
		5		5
		6		6
		7		7
		8		8
		9		9
		0		0
		Info		Info
		Pause		Pause

