



 

 

 

 
 


 
 





Originale	Sostituto	Originale	Sostituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -

Originale	Sostituto	Originale	Sostituto
	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	<[ ]>		3D
	Subtitle		Subt



 





 

 

 
 

 

 
 

 

 
 
 

 



 

 

 



Originale	Sostituto
 Text	 Text
 II/II>/[▼]	 Pause
 [i+]/[≡i]	 Info
 O)I/II	 Dual
 Stop	 Stop
 Play/[≡o]	 Play
 Eject	 Eject
 I<</[≡?]	 I<<
 <</[≡+]	 <<
 >>/[≡◇]	 >>
 >>I/[O]/[≡X]	 >>I
 AD	 Shift + Subt
 Audio	 Shift + Dual

Originale	Sostituto



 




Originale	Sostituto
 ←[/]→	 3D
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Exit/Return	 Exit

Originale	Sostituto
 Menu/DVD	 Menu
 Tv/FAV/Radio/Set	 TV/R
 Guide/Top	 Guide
 [<>]	 Format
 Text	 Text
 Subtitle	 Subt
 O)/II	 Dual
 [i+]/[≡i]	 Info
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 II/II>/[▼]	 Pause
 Play/[≡o]	 Play
 Stop	 Stop
 Eject	 Eject





 




 



 


 
 

 
 
 



 
 
 


 





 

 

 
 



 
 


 
 

 
 
 

 




 


 
 



 



 

 
 
 

 


 
 





 



 

 
Originale	Sostituto
   <</[≡?]	   <<
 <</[≡+]	 <<
 >>/[≡◇]	 >>
 >> /[O]/[≡X]	 >>
AUDIO TEXT	 +  Shift + Dual

Originale	Sostituto





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P-	 Ch -
 ←[/]→	 3D	 Mute	 Mute
 1	 1	 Guide/Top	 Guide
 2	 2	 Exit/Return	 Exit
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Menu/DVD	 Menu
 9	 9	 Tv/FAV/Radio/Set	 TV/R
 0	 0	 Red	 Red
 Source	 AV	 Green	 Green
 ATV/DTV/Content Menu	 Smart	 Yellow	 Yellow
 Vol+	 Vol +	 Blue	 Blue
 Vol-	 Vol -	 Text	 Text
 P+	 Ch +	 [<>]	 Format

Originale	Sostituto	Originale	Sostituto
 MUTE	 SHIFT	 TV	 DVD
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 <<<	 <>>
 <<<	 <>>	 SOUND	 AD
 SOUND	 AD	 DISC NAV	 SETTINGS
 DISC NAV	 SETTINGS	 LIST	 OPT
 LIST	 OPT	 DUAL	 SUBT
 DUAL	 SUBT	 PROG	 ECO
 PROG	 ECO	 SLEEP	 3D
 SLEEP	 3D	 E-MANUAL	 TIMER
 E-MANUAL	 TIMER	 D.MENU	 AV
 D.MENU	 AV	 TOP MENU	 DISPLAY
 TOP MENU	 DISPLAY	 MENU	 INFO
 MENU	 INFO	 OK	 OK
 OK	 OK	 CLEAR	 RETURN
 CLEAR	 RETURN	 EXIT	 BACK
 EXIT	 BACK	 +VOL	 HOME
 +VOL	 HOME	 APP	 SMART
 APP	 SMART	 MEDIA	 CH-
 MEDIA	 CH-	 1	 2
 1	 2	 3	 3
 3	 3	 4	 5
 4	 5	 6	 6
 6	 6	 7	 8
 7	 8	 8	 9
 8	 9	 9	 FAV
 9	 FAV	GUIDE	PRE-CH
GUIDE	PRE-CH	A	B
A	B	C	D
C	D	 www.mandis.tv	





Originale		Sostituto		Originale	Sostituto
	[i+]/[≡i]		Info		
	II>/[▼]		Pause		
	Subtitle		Subt		
	O)I/II		Dual		
	Play/[≡o]		Play		
	Stop		Stop		
	Eject		Eject		
	I<</[≡?]		I<<		
	<</[≡+]		<<		
	>>/[≡♦]		>>		
	>>I/[O]/[≡X]		>>I		
	Audio	 + 	Shift + Dual		
	AD	 + 	Shift + Subt		

