



Originale	Sostituto
Source	AV / Input / RDS
Power	Power
TV	TV/Radio /
→ [] ←	D.Menu / Top
[++]	Picture / Format
[▼]	Shift + CH- /
Subtitle	Subtitle / EQ
O / I	Audio / Lang I/II
3D	Shift + 3
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Originale	Sostituto
9	9
AD	Eject / Surround
0	0
Recall	Shift + Back / Return
Vol+	Vol+
[i+]	Info / Angle
PR+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
PR-	CH- / Page-
Quick	Display / Media
Search	Shift + Red / Netflix /
Home	Menu / Home
[o]	Zoom / Size
Options	Setup / OPT /
Up	Up
▲	Shift + Up





Originale	Sostituto
Guide	Guide / EPG / -/--
Left	Left
OK	OK
Right	Right
Back	Back / Return
Down	Down
▼	Shift + Vol-
EXit	Exit / Cancel / Clear
<<<	<<< / Tune-
<<<	Shift + <<< /
Play	Play / Slow
>>>	>>> / Tune+
>>>	Shift + >>> /
I<<<	I<<< / Preset-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>I	>>I / Preset+

Originale	Sostituto
List	Smart / List
Text	Text / Goto
Rec	Rec / Rec Mode
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

