














Originale	Sostituto
 Input	 AV / Input / RDS
 Power	 Power
 Fav / Marker / PC	 Fav / Marker / PC
 Text / Goto	 Text / Goto
 Subtitle / EQ	 Subtitle / EQ
 Audio / Lang I/II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Sound / Title	 Sound / Title
 0	 0

Originale	Sostituto
 ATV/DTV	 TV/Radio /
 Vol+	 Vol+
 Info / Angle	 Info / Angle
 CH+ / Page+	 CH+ / Page+
 Vol-	 Vol-
 Mute / Dimmer	 Mute / Dimmer
 CH- / Page-	 CH- / Page-
 Smart / List	 Smart / List
 Guide / EPG / -/-	 Guide / EPG / -/-
 Up	 Up
 Exit / Cancel / Clear	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Menu / Home	 Menu / Home
 Down	 Down
 Back / Return	 Back / Return





Originale	Sostituto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [≡?]	 Display / Media
 [≡+]	 Stop / Hold
 [≡◇]	 Zoom / Size
 Timer/[≡x]	 Sleep / Timer

Originale	Sostituto

