



Originale	Sostituto	Originale	Sostituto
CALL	Call/[≡i]	ANGLE INFO	Info / Angle
[≡]/[/≡]/[]	[≡]/[/≡]/[]	GOTO TEXT	Text / Goto
Power	Power	TV 1	1
1	1	DVD 2	2
2	2	CD - STB 3	3
3	3	VIDEO 4	4
4	4	TAPE 5	5
5	5	TUNER 6	6
6	6	AUX - HDD 7	7
7	7	USB 8	8
8	8	BLUETOOTH 9	9
9	9	RETURN BACK	Back / Return
Recall	Recall	HDMI - SAT 0	0
0	0	RDS AV INPUT	AV / Input / RDS
Source/[≡o]	Source/[≡o]	FORMAT PICTURE	Picture / Format
→ / ←	→ / ←	TITLE SOUND	Sound / Title

Originale	Sostituto	Originale	Sostituto
MENU	Menu	HOME MENU	Menu / Home
EXIT	Exit	CLEAR EXIT CANCEL	Exit / Cancel / Clear
P+	P+	CH PAGE	CH+ / Page+
Up	Up	Up	Up
Left	Left	Left	Left
Vol-	Vol-	VOL	Vol-
OK	OK	OK	OK
Vol+	Vol+	VOL	Vol+
Right	Right	Right	Right
P-	P-	CH PAGE	CH- / Page-
Down	Down	Down	Down
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
O) /	O) /	LANG I/II AUDIO	Audio / Lang I/II
[<>]	[<>]	SHIFT + FORMAT PICTURE	Shift + Picture / Format



