



 











 

 
 
 

 

 






 


 
 
 
 
 
 

 
 
 
 
 
 
 
 

 

 

 







 






 
Originale	Sostituto
 Power	 Power
 Input Select	 AV
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog+	 Ch +
 Prog-	 Ch -
 Satellite Link	 Media
 Mode	 Smart

Originale	Sostituto
 Timer/Prog.	 Sleep
 Time Slip	 Guide
 Setup	 Options
 Audio	 Dual
 Clear	 Exit
 Chapter Mark	 List
 Disc Menu	 D. Menu
 Top Menu	 Menu
 Return	 Back
 Display	 Info
 Up	 Up
 Enter	 Ok
 Down	 Down
 Right	 Right
 Left	 Left
 I<< Skip	 I<<
 Skip >>I	 >>I





	Originale	Sostituto		Sostituto
	<<		<<	
	>>		>>	
	Play		Play	
	Stop		Stop	
	Pause		Pause	
	HDD/DVD Rec		Rec	
	Variable Replay		Format	
	Variable Skip		3D	
	>II/Adjust+		Shift + Right	
	II</Adjust-		Shift + Left	
	DVD		Blue	
	HDD		Yellow	
	AV Select		Red	
	Rec Mode		Shift + Rec	
	Search		TV/R	
	Repeat		Text	
	Dubbing		Subt	

	Originale	Sostituto	
	1.3x/0.8x Play		Green

